 
 





Valena™

7700 66/67/68 - 7741 66/67/68 - 7702 66/67/68

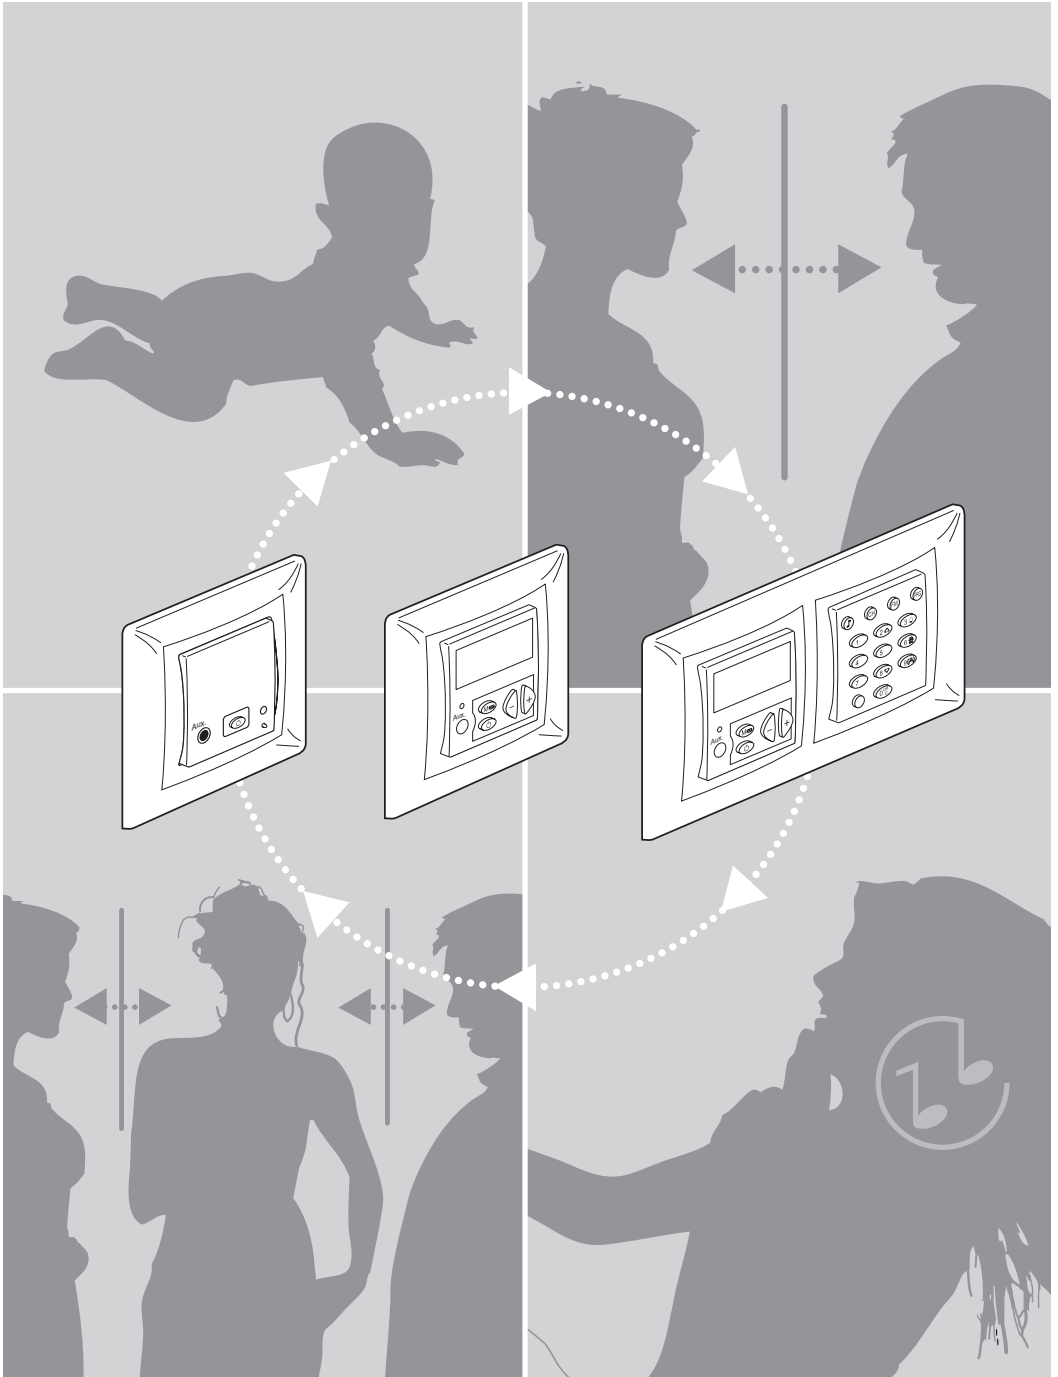



 7700 66
7741 66
7702 66

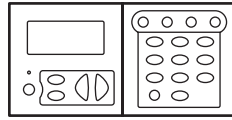

7700 67/68
7741 67/68
7702 67/68



..... 3

..... 9



..... 6

..... 7



 
..... -

..... 11




..... 6

..... 13



..... -

 ..... 14



..... -

..... 14



..... 6

..... 14



..... -

..... 15



 
..... 5

 
..... 16



..... 5

..... 17

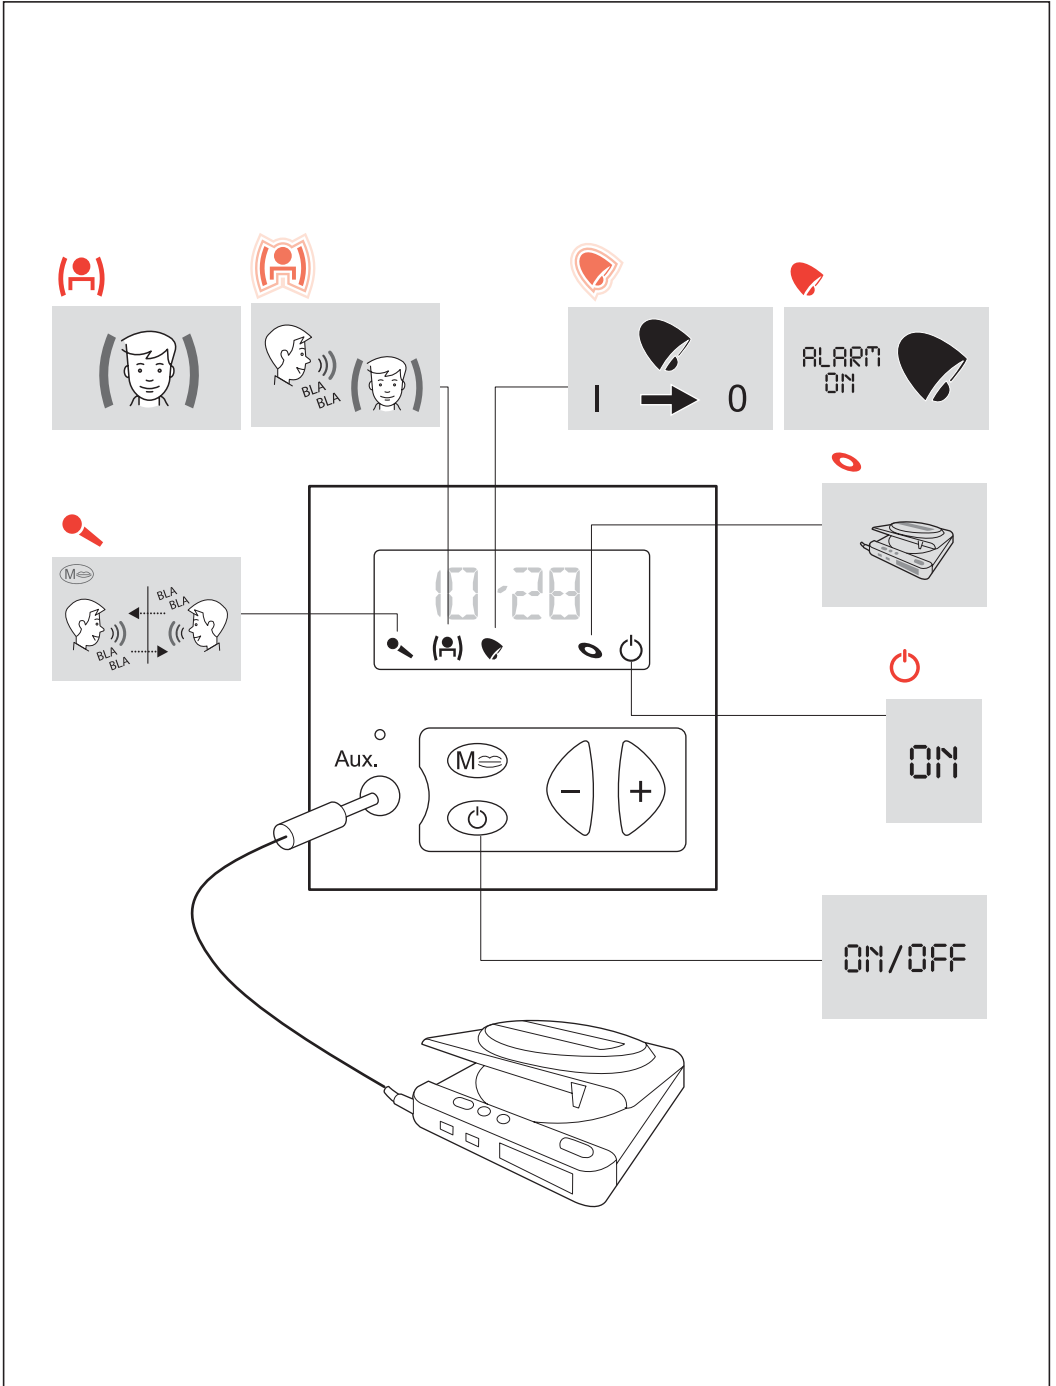

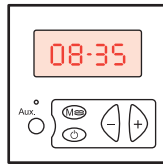


⇒ M + + + M + + + M ⇒ ALARM ON/OFF




MUSIC/BEEP → → OFF




 
BEEP → → OFF 4 min →



⇒ M ⇒ GENERAL CALL
> 1 sec

 


⇒ M + + + M ⇒ CHANNELS

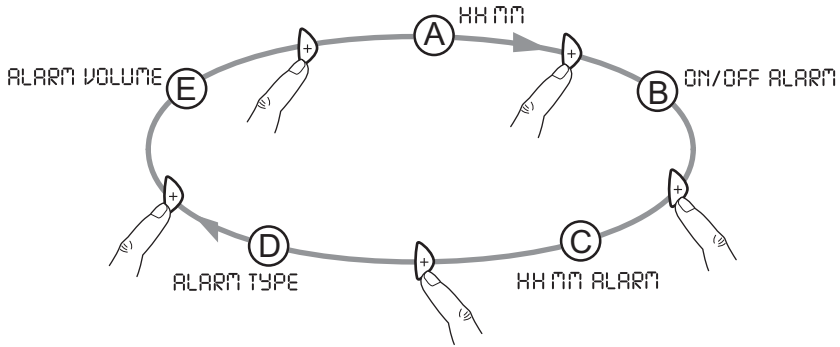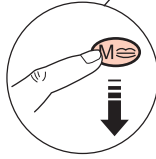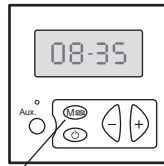    

- A**
- Setting the time
 - Acerto da hora
 - Ρύθμιση της ώρας
 - Puesta a la hora

- Óra beállítása
- Saat ayarlaması
- Nastavení hodin
- Установка времени

 
- Nastavenie času
- Ustawienie godziny
- Mise à l'heure

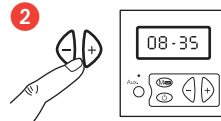

- B**
- Activating the alarm
 - Colocação em funcionamento do alarme
 - Θέση σε λειτουργία του συναγερμού


- Puesta en marcha de la alarma
- Ébresztő bekapcsolása
- Alarmın çalıştırılması
- Spuštění alarmu

 - Включение сигнала тревоги
- Zapnutí alarmu
- Uruchomienie alarmu
- Mise en route de l'alarme



ON =

 
- C**
- Selecting the alarm time
 - Escolha da hora de alarme
 - Επιλογή της ώρας συναγερμού
 - Selección de la hora de alarma
 - Ébresztési óra kiválasztása
 - Alarm saatinin seçilmesi
 - Volba času alarmu
 - Выбор времени сигнала тревоги
 - Nastavenie času, kedy sa má alarm spustiť
 - Wybór godziny alarmu
 - Choix de l'heure



1



 
2



3



 
- D**
- Selecting the alarm
 - Escolha de alarme
 - Επιλογή του συναγερμού
 - Selección de la alarma
 - Ébresztés kiválasztása
 - Alarm seçimi
 - Volba alarmu
 - Выбор сигнала тревоги
 - Výchber alarmu
 - Wybór alarmu
 - Choix d'alarme



1



 
2




3



 MUSIC

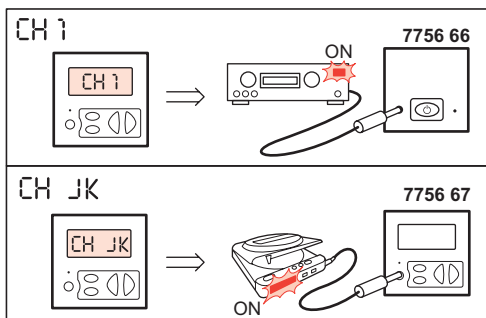

 
- E**
- Setting the volume
 - Ajuste do volume
 - Ρύθμιση της έντασης
 - Ajuste del volumen
 - Hangerő beállítása
 - Ses ayarı
 - Nastavení hlasitosti
 - Регулировка громкости
 - Nastavenie hlasitosti
 - Regulacja głośności
 - Réglage du volume



1




 
2



3



  0 99

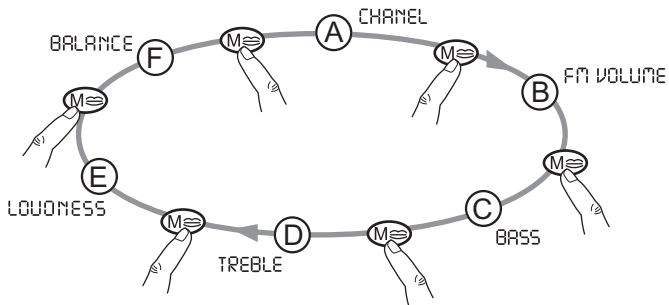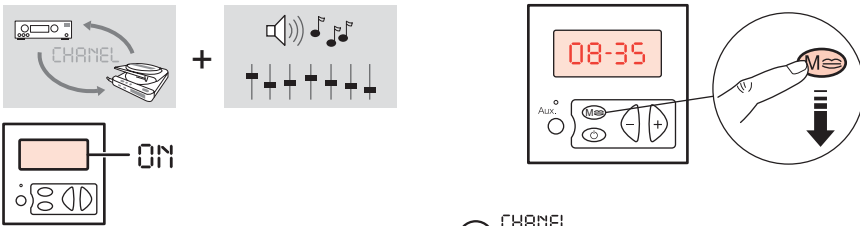


- A**
- Selecting the channel
 - Escolha do canal
 - Επιλογή του καναλιού
 - Selección del canal
 - Csatorna beállítása
 - Kanal ayarı
 - Volba kanálu
 - Выбор канала
 - Výber kanálu
 - Wybór kanału
 - Choix du canal





1



 CHANNEL JK
CHANNEL 1



2

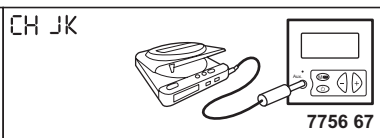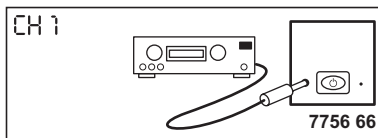  


- B**
- Setting the volume
 - Ajuste do volume
 - Ρύθμιση της έντασης
 - Ajuste del volumen
 - Hangerő beállítása
 - Ses ayarı
 - Nastavení hlasitosti
 - Регулировка громкости
 - Nastavenie hlasitosti
 - Regulacja głośności
 - Réglage de volume



1



 
0 99



2



 
- C**
- Setting the tone
 - Ajuste da tonalidade
 - Ρύθμιση του τόνου
 - Ajuste de la tonalidad
 - Hangszín beállítása
 - Ton ayarı
 - Nastavení tónu
 - Регулировка тона
 - Nastavenie oznamovacieho tónu
 - Regulacja tonalności
 - Réglage de la tonalité



1



 0 50



2

 


- D**
- Setting the treble
 - Ajuste dos agudos
 - Ρύθμιση των πρίμων
 - Ajuste de los agudos




- Magas hangok beállítása
- Tiz ayarı
- Nastavení výšek
- Регулировка высоких звуков

- Nastavenie vysokých tónov
- Regulacja tonów wysokich
- Réglage aigus

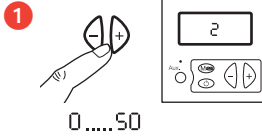


 - E**
- Amplifying the bass
 - Amplificação dos graves
 - Ενίσχυση των μπάσων
 - Amplificación de los graves



- Mély hangok erősítése
- Bas amfisi
- Zesílení hloubek
- Усиление низких звуков

 - Zosilnenie basov
- Wzmocnienie basów
- Amplification des graves

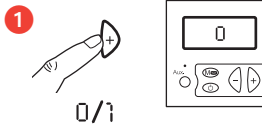


- F**
- Balance control
 - Balança
 - Εξισορρόπηση
 - Balance



- Egyensúly
- Balans
- Vyuvažení
- Баланс

 - Vyrovnávanie
- Balans
- Balance

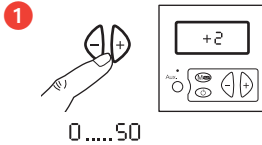

GENERAL CALL

 


 
2 sec < ... < 4 sec = 15 min

4 sec < ... < 6 sec = 30 min


6 sec < ... < 8 sec = 45 min

> 8 sec = 60 min

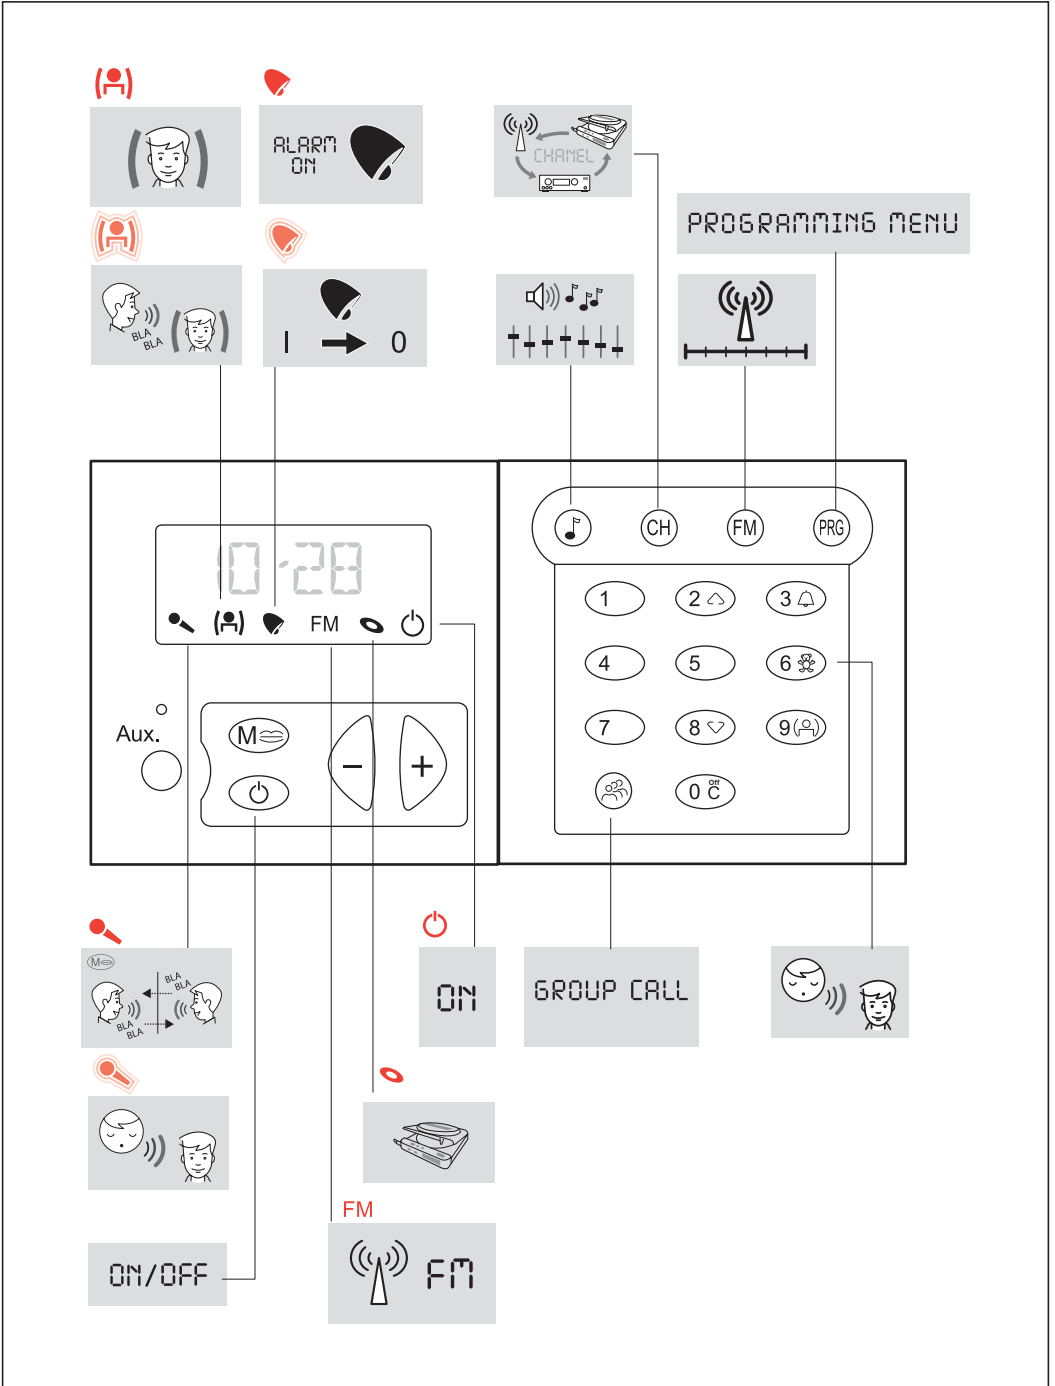

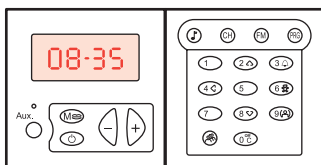

3 (🔔) + PRG ⇒ ALARM ON/OFF

 

CHANNEL FM ⇒ FM



DIRECT FM SELECTION ⇒ 8 (▼) + 9 (🔔) + 1 + 0 C + FM ⇒ 89.10

SELECT FM MEMORY ⇒ 5 + FM ⇒ [M... 5] ⇒ [F102.4]



 
 
 
0 C + PRG ⇒ GENERAL STAND BY




9 (🔔) + PRG ⇒ DO NOT DISTURB ON/OFF



6 (👶) + PRG ⇒ BABY MONITOR ON/OFF

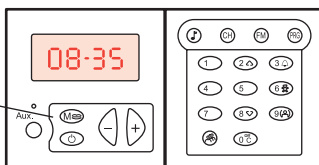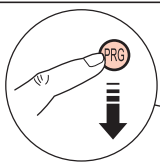

ON/OFF

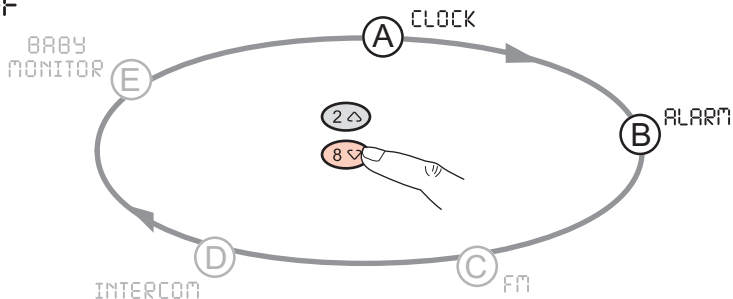 

A • Setting the time

 
- Acerto da hora
- Ρύθμιση της ώρας
- Ajuste de la hora

• Óra beállítása

- Saat ayarı
- Nastavení času
- Регулировка времени

• Nastavenie času

- Regulacja godziny
- Réglage de l'heure

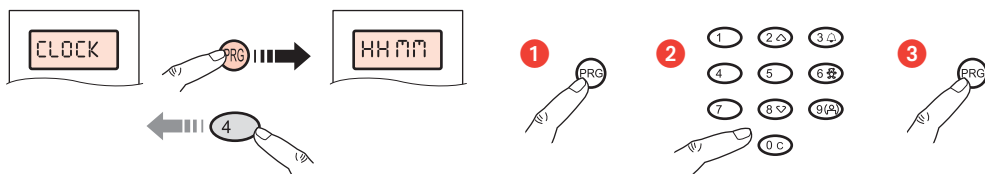

B • Setting the alarm

 
- Ajuste do alarme
- Ρύθμιση του συναγερμού
- Ajuste de la alarma

• Ébresztés beállítása


- Alarm ayarı
- Nastavení alarmu
- Регулировка сигнала тревоги

• Nastavenie alarmu



- Regulacja alarmu
- Réglage de l'alarme

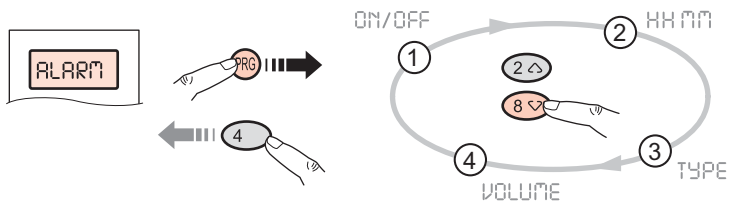

② ALARM

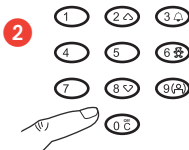 


③ ALARM

  


MUSIC



 
CH 1



CH JK

 






CH FM

 





- Last monitoring recorded by the alarm.
- Monitorización del último evento de la alarma.
- Τελευταίος ήχος στο ξυτηνητήρι.
- A riasztó átlal felvett utolsó megfigyelés.
- Alarm zapisuje ostatni monitoring
- O alarme toca com o último canal de música que estava activo.
- Poslední záznam alarmu.
- Последнее звуковое сообщение, записанное системой сигнализации.
- Alarm için ayarlanan son kanal.
- Posledné nastavenie brané do úvahy v prípade nastavenia budenia.
- Laatste opname door alarm.
- Ultima monitorizare inregistrata de alarma.
- Dernière écoute prise en compte par l'alarme.

     ④ ALARM




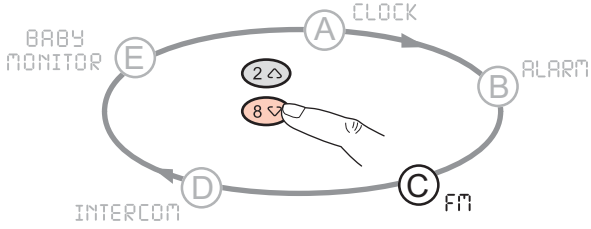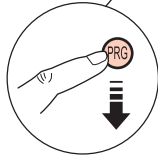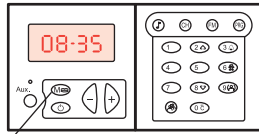



③

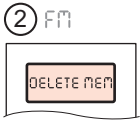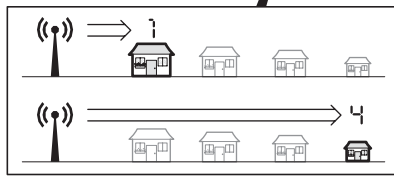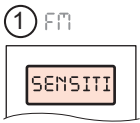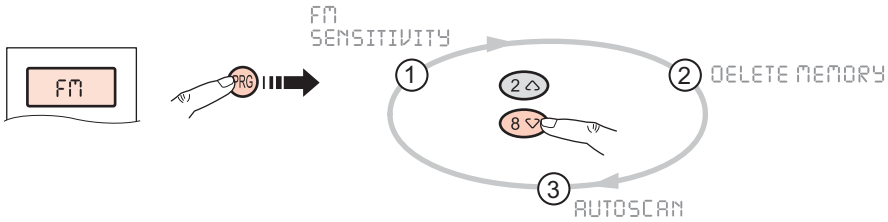    





③ FM

 





MANUAL FM SELECTION


 
 


FM SCAN

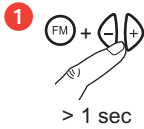    


MEM

  
 
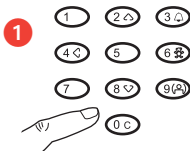 


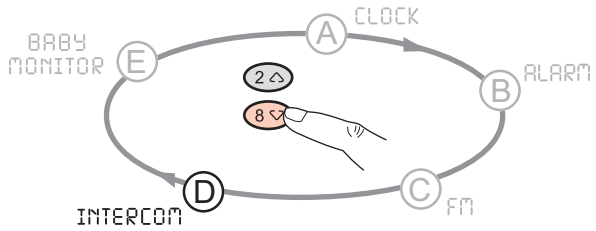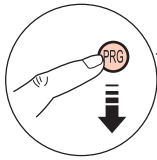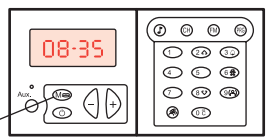   

 
- D**
- Intercom function
 - Função de comunicação
 - Λειτουργία επικοινωνίας
 - Función comunicaci6n
- Kommunikáci6 funkci6
 - İletişim fonksiyonu
 - Komunikaci6ni funkce
 - Функции связи
- Komunikačná funkcia
 - Funkcija komunikacji
 - Fonction communication

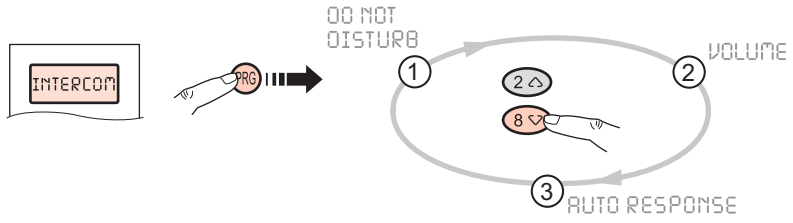

1 INTERCOM

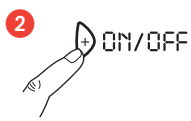  
 


2 INTERCOM



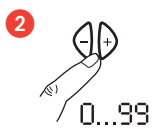 







GENERAL CALL



 
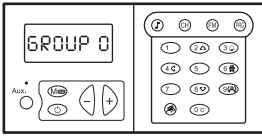 


GROUP CALL

 
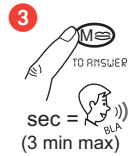 
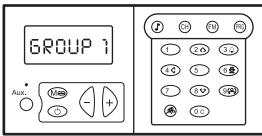 



INDIVIDUAL ZONE CALL

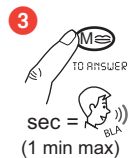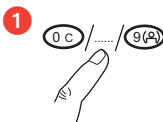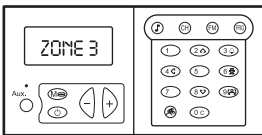   

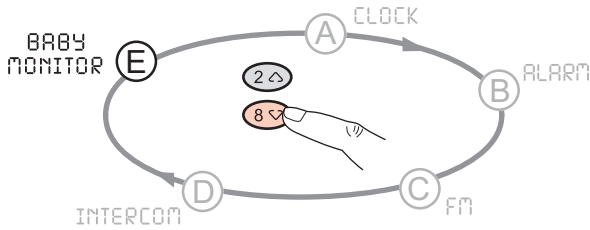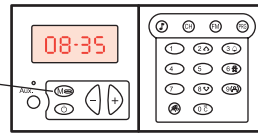  
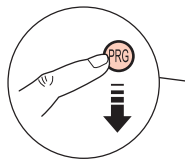 
 


    - E** • Baby intercom call
 • Chamada Bebé
 • Κλήση Μωρό
 • Llamada Bebé
- Babahívás
 • Bebek çağırısı
 • Elektronická chůva
 • Вызов ребенка
- Volanie Dieťa
 • Wołanie dziecka
 • Appel Bébé

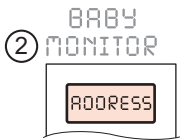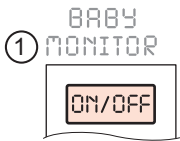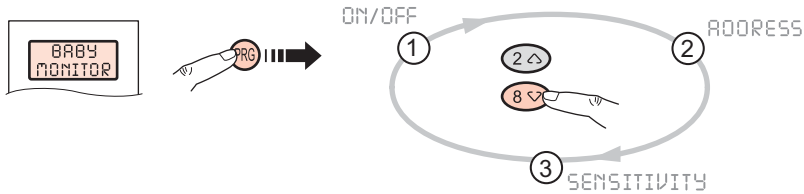



ON/OFF

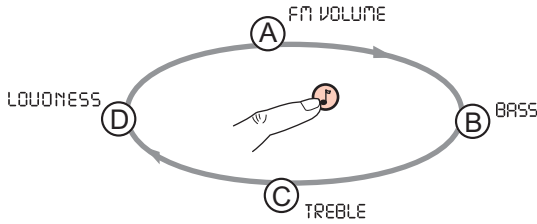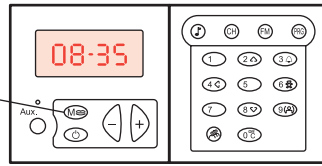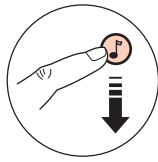   


- A**
- Setting the volume
 - Ajuste do volume
 - Ρύθμιση της έντασης
 - Ajuste del volumen

- Hangerő beállítása
- Ses ayarı
- Nastavení hlasitosti
- Регулировка громкости

- Nastavenie hlasitosti
- Regulacja głośności
- Réglage du volume



 1



2

 


0 99


- B**
- Setting the tone
 - Ajuste da tonalidade
 - Ρύθμιση του τόνου
 - Ajuste de la tonalidad

- Hangszín beállítása
- Ton ayarı
- Nastavení tónu
- Регулировка тона

- Nastavenie oznamovacieho tónu
- Regulacja tonalności
- Réglage de la tonalité



1

 

2

 


0 50


- C**
- Setting the treble
 - Ajuste dos agudos
 - Ρύθμιση των πριμών
 - Ajuste de los agudos

- Magas hangok beállítása
- Tiz ayarı
- Nastavení výšek
- Регулировка высоких звуков

- Nastavenie vysokých tónov
- Regulacja tonów wysokich
- Réglage aigus



1

 

2

 


0 50


- D**
- Amplifying the bass
 - Amplificação dos graves
 - Ενίσχυση των μπάσων
 - Amplificación de los graves

- Mély hangok erősítése
- Bas amfisi
- Zesílení hloubek
- Усиление низких звуков

- Zosilnenie basov
- Wzmocnienie basów
- Amplification des graves



1

 

2



0/1

